

**Instructions & Maintenance**

**uvgold**

**Issue 1**

**INTRODUCTION**

The corrosion resistant UVGold Unvented cylinder is made from Duplex Stainless Steel. It is highly insulated with environmentally friendly foam enclosed in a rust resistant white steel case.

It is available in Direct, and Indirect versions in a family of 7 sizes from 100 – 300 litres in Twin Coil and Indirect. Direct Eco units are available in 5 sizes from 150 - 300 litres . There is also a range of slimfit units from 60 - 210 Litres again in Direct and Indirect versions.

To help ensure compliance with the relevant Water and Building Regulations all UVGold units are supplied complete with the necessary safety and control devices needed to connect to the cold water mains. In order to ensure high flowrate performance with minimum pressure drop even in lower pressure areas , pre-set high quality controls have been selected.

UVGold is approved to demonstrate compliance with Water Regulations and Building Regulations G3 & Part L.

**STORAGE PRIOR TO INSTALLATION**

UVGold should be stored upright in a dry area and kept in its original packaging until immediately prior to installation.

**INSTALLATION PREREQUISITES**

This Cylinder should only be installed by a competent installer holding their G3 unvented qualification. The installation of this product is also notifiable under the national Building Regulations.


**ONCE COMPLETED THIS INSTRUCTION MANUAL IN ITS ENTIRETY SHOULD BE LEFT WITH THE HOME OWNER.**

**WHAT IS BENCHMARK?**

Benchmark places responsibilities on both manufacturers and installers. The purpose is to ensure that customers are provided with the correct equipment for their needs, that it is installed, commissioned and serviced in accordance with the manufacturer’s instructions by competent persons and that it meets the requirements of the appropriate Building Regulations. The Benchmark Checklist can be used to demonstrate compliance with Building Regulations and should be provided to the customer for future reference.

Installers are required to carry out installation, commissioning and servicing work in accordance with the Benchmark Code of Practice which is available from the Heating and Hotwater Industry Council who manage and promote the scheme. Visit [www.centralheating.co.uk](http://www.centralheating.co.uk)

**COLD INLET SET - WHAT ARE THE CONNECTIONS?**

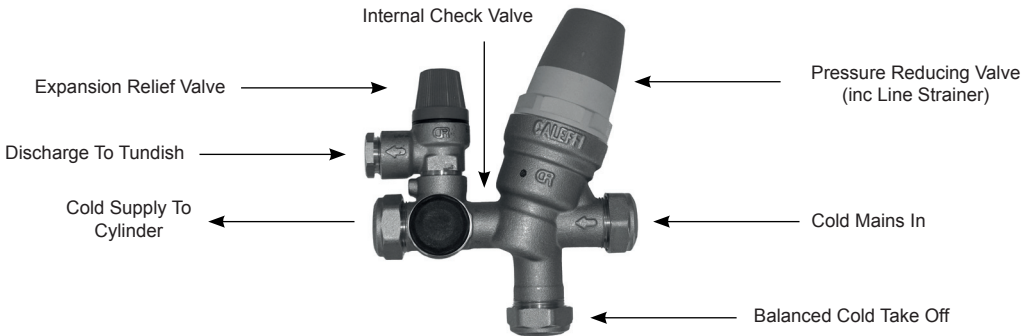

**Equipment Supplied With Cylinder**



Cold Water Inlet Set	
15 x 22mm Tundish	
Temperature & Pressure Relief Valve	
Expansion Vessel	
Expansion Vessel Bracket	
Compression Nut Connection For Expansion Vessel	
Immersion Heater(s) - Dependant on size & configuration	
Instructional Manual	
Benchmark Log Book - Found at the rear of this manual	

## WATER SUPPLY

UVGold is capable of delivering over 50 litres per minute when connected to a suitable mains supply. The high quality inlet control set with its 3 bar operating pressure has been designed to make the most of what is available however the performance of any unvented system is only as good as the water supply.

In unvented systems both hot and cold services are supplied simultaneously from the mains so the maximum possible on-site water demand must be assessed and the water supply should be tested to ensure it can meet these requirements. If necessary consult the local water supplier regarding the likely pressure and flow rate availability.

It is important that site pressure readings are taken under dynamic flow conditions, high pressures under zero flow conditions are not necessarily indicative of satisfactory performance. A minimum of 1.5 bar at 20 l/m flow should be available. Where mains inlet pressures are likely to exceed 16 bar then an additional upstream pressure reducing device should be fitted.

A minimum of 22mm supply pipe-work should ideally be provided and existing 1/2" (15mm) cold mains pipe-work may need to be upgraded. Hard water treatment should be considered in areas where content is greater than 200ppm, if required adjust cylinder temperature to below 60 degrees.


## SITING THE UNIT

UVGold can be positioned more or less anywhere in the dwelling but it should be remembered that for every 1 metre that an outlet is above the UVGold, the pressure will be reduced by 0.1 bar. If siting outside the heated envelope of the dwelling such as in a garage or outbuilding then frost protection should be provided and exposed pipework should be insulated.

UVGold must be supported on a flat base capable of supporting the weight of the cylinder when full. The minimum recommended cupboard size is 650mm square.

It's important that consideration is given to access for maintenance of the valves. The immersion heaters are 375 mm long and access space should be provided for possible future replacement, also adequate access to remove and re-install the cylinder in the event of a problem.

## SCHEMATIC

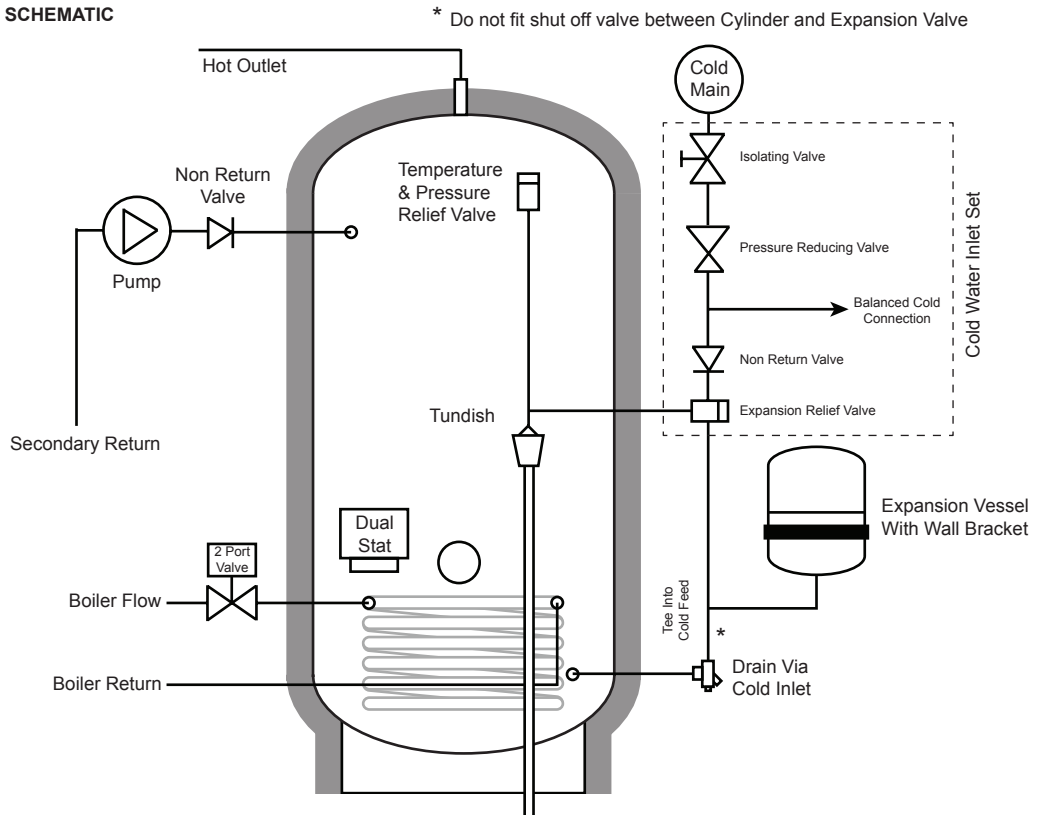

## GENERAL INSTALLATION

### COLD MAINS PIPEWORK AND EXPANSION VESSEL

Run the cold main through the building to the place where the UVGold is to be installed. Take care not to run the cold pipe near hot water or heating pipe work so that the heat pick up is minimised. Identify the cold water supply pipe and fit an isolating valve (not supplied).

A 22mm BS1010 stopcock can typically be used but a 22mm quarter turn full bore valve would be better as it does not restrict the flow as much. Do not use "screwdriver slot" or similar valves.

Make the connection to the cold feed of the cylinder and incorporate a drain valve. Position the inlet control just ABOVE the Temperature & Pressure Relief Valve (TPRV) mounted on the side of the cylinder. This ensures that the cylinder does not have to be drained down in order to service the inlet control set. Ensure that the arrow points in the direction of the water flow. Select a suitable position for the expansion vessel. Mount it to the wall using the bracket provided. Use the compression connection supplied to connect the vessel into the cold water pipe adjacent to the cold feed point on the cylinder. There must be no obstruction or flow restriction between the cylinder and the expansion vessel.

### BALANCED COLD CONNECTION

If there are to be showers, bidets or monobloc taps in the installation then a balanced cold supply is necessary. There is a 22mm balanced connection on the inlet control set. All outlets in the house will be at 3 bar and thus automatically balanced.

### HOT WATER PIPEWORK

Run the first part of the hot water distribution pipework in 22mm. This can be reduced to 15mm and 10mm as appropriate for the type of tap etc. Your aim should be to reduce the volume of the hot draw off pipework to a practical minimum so that the time taken for the hot water is as quick as possible.

Do not use monobloc mixer tap or showers if the balanced cold connection is not provided, the unit will back pressurise and result in discharge. Ensure that the top of the vessel is accessible for servicing.

### PRIMARY COIL CONNECTIONS (Indirect Only)

Compression connections are provided for the primary circuit which must be positively pumped. Primary flow and return connections are interchangeable to suit site conditions without affecting reheat times.

Sealed or vented primary circuits can be used, to comply with normal installation practice the primary pressure should not exceed 3 bar although the coil in Stelfow is suitable for up to 7 bar if required. The boiler may be Gas, Electric, Oil etc but must be under effective thermostatic control. Uncontrolled heat sources such as some AGA's, back boilers, solid fuel stoves, etc may not be suitable please contact us for guidance. The two port zone valve should be installed into the primary flow pipework leading to the coil flow inlet. The direction of flow arrow should be towards the primary flow connection. On twin coil cylinders an extra thermostat boss is provided.

### SECONDARY CIRCULATION

Where secondary circulation is required a circulator suitable for potable water should be used in conjunction with a non return valve to prevent backflow. It may be necessary to incorporate an extra expansion vessel into the circuit to accommodate the increased system water volume in larger secondary circulation systems. Where off peak electrical tariffs are being used then secondary circulation should be avoided. A secondary return boss is fitted as standard on 210, 250 & 300L. On smaller sizes tee into the cold feed pipe above the drain.

### IMMERSION HEATERS


As a requirement of Building Regulations the UVGold immersion heaters are fitted with thermal cut-out in addition to the normal control thermostat. To help ensure correct replacement the immersion heaters have a special 1<sup>3</sup>/<sub>4</sub>" thread. They are of a low noise Incoloy construction and rated at 3 kW at 240 V. Replacement immersion heaters should be purchased via ourselves otherwise your guarantee may be affected.

The 'O'ring on the head of the immersion heater should be correctly positioned and lubricated before fitting. Screw in hand-tight until almost sealed then gently tighten as the 'O' rings will seal easily. The electrical supply to each immersion heater/s must be fused at 13A via a double pole isolating switch to BS 3456. The cable must be 2.5mm<sup>2</sup> heat resistant (85°C HOFRR) sheathed flex complying to BS 6141:1981 Table 8. Do not operate the immersion heater/s until the unit is full of water. If any sterilisation liquid is in the cylinder do not operate the immersion heater/s as this will cause premature failure. Electric to be supplied by a fused supply compliant with local regulations, and fitted by a qualified Part P Electrician.

### ENERGY CUT OUT AND CYLINDER THERMOSTAT (Indirect Only)

As a requirement of Building Regulations the UVGold units are fitted with a thermal cut-out in addition to the normal control thermostat. This unit should be fitted to the dedicated boss on the cylinder and wired to the two port valve controlling the primary flow.(see wiring diagram).

## DISCHARGE ARRANGEMENT

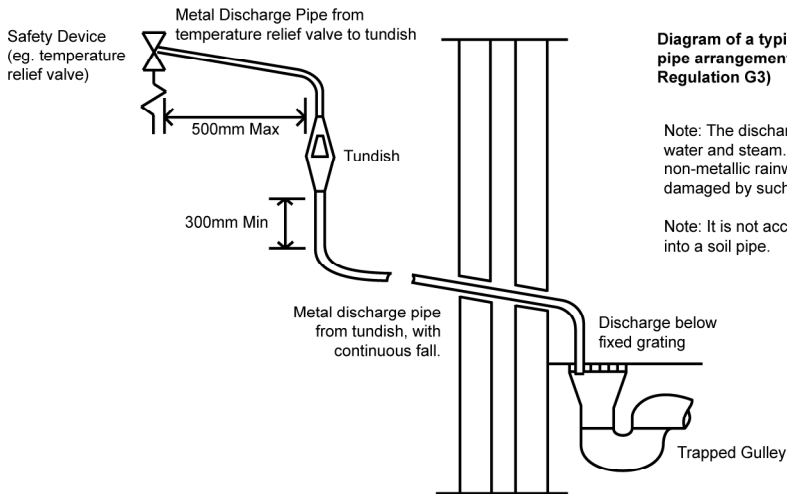

General guidance is provided by the above diagram extracted from the G3 Building Regulation Guidance. This guidance is available as a free of charge download of the G3 Approved Document from [www.planningportal.gov.uk](http://www.planningportal.gov.uk). The discharge from both the temperature relief and expansion relief valves can be joined together via a 15mm end feed tee.

It is important that any discharge water does not collect in this pipe-work and can run freely to the tundish. The tundish should be mounted in a vertical and visible position located in the same space as the unvented hot water storage system and be fitted as close as possible and within 500mm of the safety device e.g. the temperature relief valve. The discharge pipe-work from the tundish must be routed in accordance with Part G3 of the Building Regulations.

The discharge pipe from the tundish should terminate in a safe place where there is no risk to persons in the vicinity of the discharge, be of metal and:


- Be at least one pipe size larger than the nominal outlet size of the safety device unless its total equivalent hydraulic resistance exceeds that of a straight pipe 9m long i.e. discharge pipes between 9m and 18m equivalent resistance length should be at least two sizes larger than the nominal outlet size of the safety device, between 18 and 27m at least 3 sizes larger, and so on. Bends must be taken into account in calculating the flow resistance. An alternative approach for sizing discharge pipes would be to follow BS6700 Specification for design installation, testing and maintenance of services supplying water for domestic use within buildings and their curtilages.
- Have a vertical section of pipe at least 300mm long, below the tundish before any elbows or bends in the pipework.
- Be installed with a continuous fall.
- It is preferable for the discharge to be visible at both the tundish and the final point of discharge but where this is not possible or practically difficult there should be clear visibility at one or other of these locations.

Examples of acceptable discharge arrangements are:


- Ideally below the fixed grating and above the water seal in a trapped gully.
- Downward discharges at a low level; i.e. up to 100mm above external surfaces such as car parks, hard standings, grassed areas etc. are acceptable providing that where children play or otherwise come into contact with discharges, a wire cage or similar guard is positioned to prevent contact whilst maintaining visibility.
- Discharges at a high level; e.g. in to metal hopper and metal down pipe with the end of the discharge pipe clearly visible (tundish visible or not) or onto a roof capable of withstanding high temperature discharges of water and 3m from any plastic guttering systems that would collect such discharges (tundish available).
- Where a single pipe serves a number of discharges, such as in blocks of flats, the number served should be limited to not more than 6 systems so that any installation can be traced reasonably easily. The single common discharge pipe should be at least one pipe size larger than the largest individual discharge pipe to be connected. If unvented hot water storage systems are installed where discharges from safety devices may not be apparent i.e. in dwellings occupied by blind, infirm or disabled people, consideration should be given to the installation of an electronically operated device to warn when discharge takes place.

**Any queries with regard to discharge arrangement contact your local council planning office.**

## WIRING DIAGRAM 2 x 2 Port zone valves (Typically Honeywell "S" Plan)

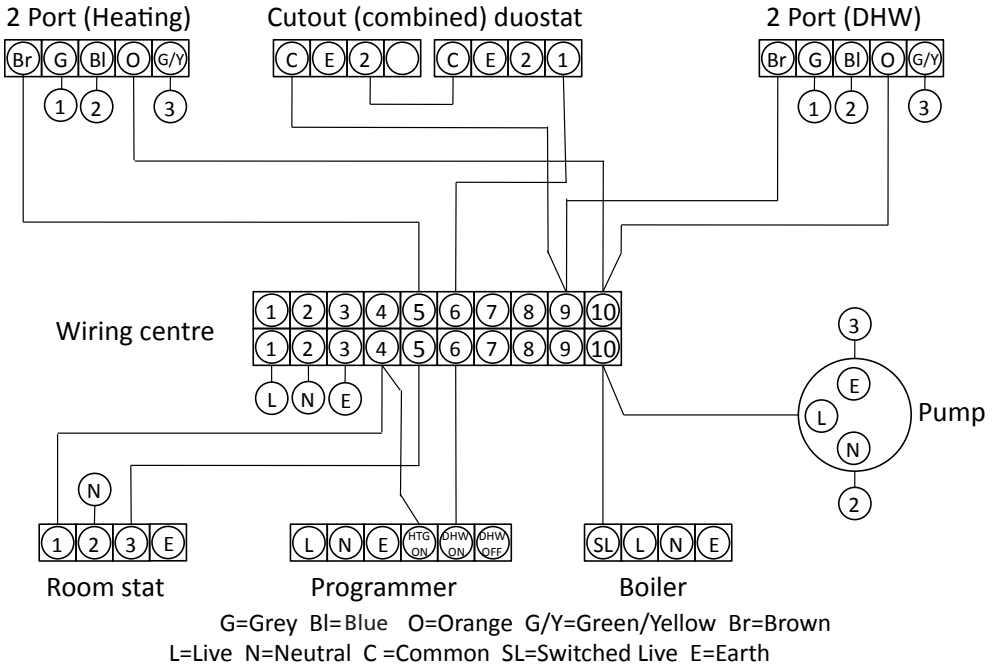

## WIRING DIAGRAM 3 Port + 2 Port (Typically Honeywell "Y" Plan)

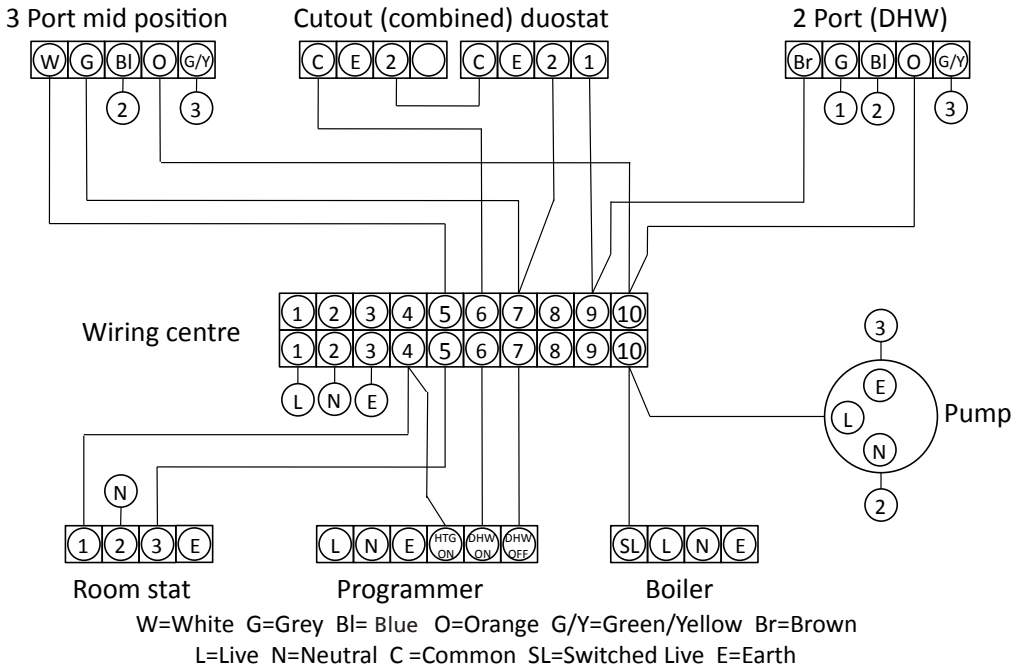

## **COMMISSIONING SERVICING**

### **FILLING**

Check all connections for water tightness including any factory made connections such as the immersion heater and the temperature and pressure relief valve. The pressure in the expansion vessel should be checked to ensure it is 3 bar (45PSI). The valve is of the car tyre (Schrader) type.

The hot tap furthest away from the UVGold should be opened before filling the system to let air out.

The system should be flushed before use. The remaining taps should be opened in turn to expel air.

### **DIRECT UNITS**

The system must be fully filled and flushed before switching on the power to the immersion heaters and allowing the unit to heat up. The immersion heater is supplied preset at 55°C. Turning fully to + sets to approx 65°C.

### **INDIRECT UNITS**

Ensure the lever on the two port valve is set to the filling position and use the boiler manufacturers commissioning instructions to fill the primary circuit. When full release the lever. Switch the programmer to Domestic Hot water (DHW) and allow the unit to start to heat. Adjust the dial of the dual thermostat to between 55°C and 65°C as required.

### **STORAGE TEMPERATURE**

A storage temperature of 60-65°C is normal for both direct and indirect UVGold. In hard water areas consideration should be given to reducing this to 55-60°C. In many healthcare applications the guidance on Legionella control and safe water delivery temperatures will require storing the water at 60-65°C, distributing at 50-55°C and using thermostatic mixing valves to control the final temperature. For details consult the NHS estates guidance on safe hot water temperatures.

### **SAFETY VALVE CHECKS**

Any water coming from either the expansion relief valve or the temperature / pressure relief valve during heat up is indicative of a problem which needs to be identified and rectified. The temperature relief and expansion relief valves should be fully opened, one at a time then both together allowing as much water as possible to flow through the tundish. Check that your discharge pipework is free from debris and is carrying the water away without spillage over the tundish and release the valves and check that they reseal properly.

### **GENERAL**

Servicing should only be carried out by competent installers and any spare parts used must be purchased from RM Cylinders. NEVER bypass any safety devices or operate the unit without them fully operational.

### **DRAINING**

Isolate from the electrical supply to prevent the immersion heaters burning out. Isolate the unit from the cold mains. Attach a hose to the draining tap ensuring it reaches to a level below the unit (This will ensure an efficient syphon is set up and the maximum amount of water is drained from the unit). Open the hot tap closest to the unit and open the draining tap.

### **WARNING: WATER DRAINED OFF MAY BE VERY HOT!**

### **ANNUAL SERVICING**

A competent installer should carry out the following checks on an annual basis, ideally at the same time as the annual boiler service.

1) The expansion relief valve on the inlet control set should be eased open allowing water to flow for 5 seconds. The valve should then be closed making sure it resets correctly. Repeat this procedure with the pressure / temperature relief valve. Always insure that the discharge pipework is allowing the water to drain away adequately. If not check for blockages etc. and clear.

### **WARNING: THE WATER DISCHARGED MAY BE VERY HOT!**

- 2) Ensure that any immersion heaters that are fitted are working correctly and that they are controlling the water at a temperature of between 55°C and 65°C.
- 3) Make sure the pressure in the expansion vessel is charged to 3 bar. Turn off the water supply to the unit and open a hot tap first. The valve on the expansion vessel is a Schrader (standard car tyre) type. Air or CO2 can be used to repressurise the expansion vessel.
- 4) Remove the head on the inlet control set by unscrewing, and clean the mesh filter within.
- 5) The benchmark service record supplied within this manual should be updated at each service.

### **YOUR GUARANTEE MAY BE VOID WITHOUT PROOF OF ANNUAL SERVICING.**

**THE COMMISSIONING CERTIFICATE SUPPLIED AT THE REAR OF THIS MANUAL SHOULD ALSO BE COMPLETED BY THE INSTALLER.**

## **GUARANTEE**

The UVGold stainless steel vessel carries a 25 year guarantee against faulty materials or manufacture provided that:

- It has been correctly installed as per this document and all the relevant standards, regulations and codes of practice in force at the time.
- It has not been modified in any way, other than by RM Cylinders.
- It has not been misused, tampered with or subjected to neglect.
- It has only been used for the storage of potable water.
- It has not been subjected to frost damage.
- The unit has been serviced annually.
- The benchmark service record has been filled in after each annual service.
- The guarantee period starts from the date of purchase and no registration is required.
- The extended guarantee is not transferable, and rests with the original householder.
- The system is fed from a public mains water supply.

Please note that invoices for servicing may be requested to prove that the unit has been serviced annually. All the components fitted to / or supplied with the UVGold carry a 2 year guarantee.

## **EXCLUSIONS –THE GUARANTEE DOES NOT COVER**

The effects of scale build up. Any labour charges associated with replacing the unit or its parts. Any consequential losses caused by the failure or malfunction of the unit.

## **GUIDANCE IN THE EVENT OF A PROBLEM**

If you have a problem in the first year contact the plumber who fitted the unit. Thereafter contact the plumber who carries out the annual servicing for you. If your UVGold develops a leak we will supply you with a new one. We ask for an up-front payment to prevent fraud. We will require the original unit to be returned to us for inspection along with a copy of your service record and commissioning checksheet. If it is confirmed that it has failed within the terms of the warranty your upfront payment will be refunded. If a component part fails within the two year guarantee period we will send you a new one again with an upfront charge. Credit card details may be taken to prevent fraud. We ask you to post the faulty part back to us within one month by recorded delivery. Once the part has been tested and proven faulty a refund will be issued.

## **USER INSTRUCTIONS**

Your stainless system is automatic in normal use and requires only annual servicing. You should employ a competent installer to perform the annual servicing. Normally this is timed to coincide with the annual boiler service.

## **IF WATER IS FLOWING FROM THE SAFETY VALVES THROUGH THE TUNDISH THIS INDICATES A FAULT CONDITION AND ACTION IS NEEDED.**

If this water is hot turn the boiler and / or the immersion heater off. Do not turn off the water until the discharge runs cool. The discharge may also stop.

## **CALL A COMPETENT PLUMBER OUT TO SERVICE THE UNIT.**

Tell them you have a fault on an unvented cylinder. We stock all the spare parts they may need.



## **UVGold Unvented Indirect**

### **Twin Coil Solar**

Indirect twin coil units can be installed in two separate formats:

- a) In a solar powered system with a backup boiler.
- b) In a system with two non-solar heat sources (normally two boilers).

With either format it is essential that the installation meets all current regulations including, in particular, the high limit cut out requirements of Building Regulation G3.

### **Upper Coil**

This is connected to the boiler as per the instructions for a UVGold single coil cylinder with the high limit thermostat inserted into the middle thermostat pocket and wired to control the supplied two port valve in either the primary flow or return as indicated in the wiring instructions.

### **Lower Coil: Solar Variant**

In a solar system the lower coil is connected to the solar heat source. Either primary coil connection may be used for flow or return. The solar cylinder sensor supplied is inserted into the lower thermostat pocket and the energy cut out into the upper pocket. The 'mechanical' control thermostat is not normally utilised in a solar system. In systems where the panels are above the cylinder then the energy cut out shall be wired so as to interrupt the power supply to the solar pump or controller in the event of over temperature.

In systems where the cylinder is above the panels then the energy cut out should be wired to a suitable two port valve (not supplied) on the return pipe-work to the solar panel.

### **Lower Coil: Non Solar Variant**

This is connected to the additional boiler as per the instructions for a UVGold single coil cylinder with the high limit thermostat inserted into the lower thermostat pocket and wired to control the supplied two port valve in either the primary flow or return.





**Essential Cylinder Information**

Maximum water supply pressure - 16 Bar

Immersed electric element rating - 3kW

Operating pressure - 3 Bar

Expansion vessel charge pressure - 3 Bar

Expansion valve setting - 6 Bar

Set opening pressure of combined T&amp;P valve - 7 Bar

Storage capacity - See cylinder info table

Mass of unit - See cylinder data table

Immersion heater length - 14"

Maximum primary pressure (indirects only) - 3 Bar

**Standard Cylinder Data Table**

		Capacity (Litres)	Weight (Kg) (Empty)
Gold 100	Direct	100	23
	Indirect	98	25
Gold 120	Direct	120	26
	Indirect	118	30
Gold 150	Direct	150	33
	Indirect	148	38
Gold 170	Direct	170	36
	Indirect	168	40
	Solar Twin	167	43
Gold 210	Direct	210	41
	Indirect	208	45
	Solar Twin	207	48
Gold 250	Direct	250	46
	Indirect	248	51
	Solar Twin	247	53
Gold 300	Direct	300	55
	Indirect	298	60
	Solar Twin	297	63

**Slimline Cylinder Data Table**

		Capacity (Litres)	Weight (Kg) (Empty)
Gold 150 Slim	Direct	150	35
	Indirect	148	38
Gold 170 Slim	Direct	170	38
	Indirect	168	40
Gold 210 Slim	Direct	210	46
	Indirect	208	48

RM Cylinders

4 Valencia Park, Gilcar Way, Wakefield Europort, Castleford, WF10 5QS  
 Tel: 01924 224282 Fax: 01924 224283 Website: [www.uvgoldcylinders.co.uk](http://www.uvgoldcylinders.co.uk)